

MAIN BEARING CAP BOLT KIT INSTALLATION INSTRUCTIONS

- 1) Lubricate threads and under head with ARP Lube.
- 2) Place washer with beveled side toward bolt head.
- 3) Torque to 70 ft/lb



**Good Parts Inc.
Richard Good
4316 New Holland Rd.
Mohnton, PA 19540
(610)777-4457
goodparts@verizon.net**