


## INSTALLING PARKING BRAKE LEVER EXTENSIONS

- 1) Remove the split pin and clevis pin to disconnect the parking brake cable from the parking brake lever.
- 2) Install the lever extension as shown in the photo using the bolt and nylon stop nut and torque to 20 ft/lb.
- 3) Connect the cable to the lever extension using the new clevis pin, washer and split pin.
- 4) If needed, rotate the cable sheath anchor block slightly to align the cable with the extended lever.

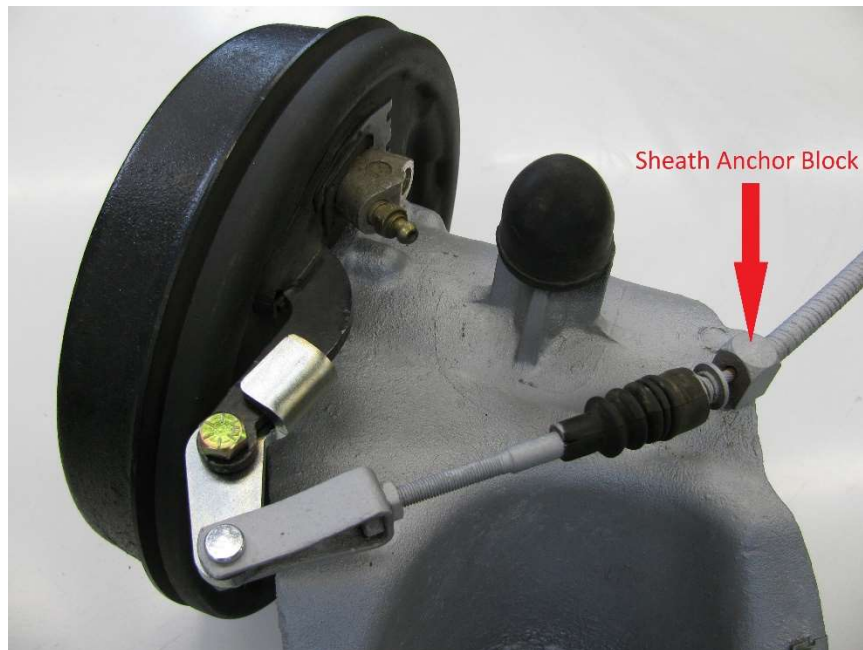

### PARTS LIST

- |                                                          |                                                      |
|----------------------------------------------------------|------------------------------------------------------|
| 1 - Parking Brake Lever Extension, Right Side            | 2 - Pin, Clevis, $\frac{5}{16} \times \frac{3}{4}$ " |
| 1 - Parking Brake Lever Extension, Left Side             | 2 - Washer, $\frac{5}{16}$ SAE                       |
| 2 - Bolt, Hex head, $\frac{5}{16}$ -24 x $\frac{3}{4}$ " | 2 - Pin, Split, $\frac{3}{32} \times \frac{3}{4}$ "  |
| 2 - Nut, nylon locking, $\frac{5}{16}$ -24               |                                                      |



Good Parts Inc.  
Richard Good  
4316 New Holland Rd.  
Mohnton, PA 19540  
(610)777-4457  
goodparts@verizon.net